





SIEMENS

euroset 3020



User Manual
Instrucciones de Manejo

Contents


Telephone characteristics	3	Erasing the outgoing calls	12
Learning to use your telephone	3	Password	12
Installation	3	Changing the password.....	13
Battery / Power supply installation.....	3	Key Lock	13
Handset cord.....	4	Locking or unlocking the telephone...	13
Line cord	4	Temporary unlocking the telephone ..	14
Recommendation for Installation	4	Baby Call	14
Configuration	5	Activating the Baby Call function.....	14
Display bright	5	Deactivating the Baby Call function...	14
Backlight.....	5	Function keys for special services	14
Setting the time.....	5	Follow-me	15
Setting the date.....	6	Call Waiting.....	15
Setting the ringer volume.....	6	Consultation	15
Setting the melody.....	6	Conference	15
Setting the dialing mode (tone/pulse) ..	6	Mailbox.....	15
Setting the reception volume	7	Alarm	15
Area code for long distance call	7	Programming the alarm	16
Operator code	7	Deactivating the alarm.....	16
Mailbox.....	8	Quick Reference Guide	17
Other configurations	8		
Receiving calls	8		
Dialing call numbers	9		
Using the numeric keypad to make a			
call.....	9		
Using the memories to make a call	9		
Using the List of Received Calls to			
make a call.....	9		
Using the List of Outgoing Calls to			
make a call.....	9		
Using the REDIAL key  to make a			
call.....	9		
MUTE key 	10		
Activating/deactivating the MUTE			
music.....	10		
PAUSE key 	10		
FLASH Key  (special services).....	10		
Memories	10		
Storing phone number in the			
memories	10		
Call Identification	11		
Receiving a call.....	11		
Indication of received calls.....	11		
Consultation of received calls.....	11		
Erasing the received calls.....	12		
Consultation of outgoing calls.....	12		

Telephone characteristics

This telephone has the following characteristics:


- Telephone with FSK caller identification
- Telephone with intelligent keys (activates special services in digital central offices)
- Ring with 3 volumes and 3 melodies
- List of received calls for 99 numbers
- List of originated calls for 99 numbers
- Telephone with 12 memories
- Display illumination (backlight)

Learning to use your telephone

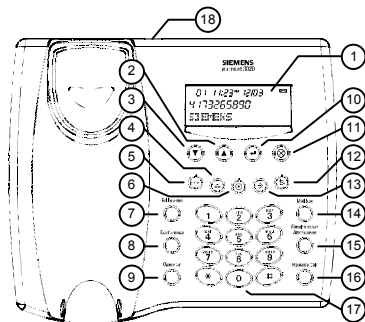

- 1) Display
- 2) ARROW key above ▲
- 3) ARROW key below ▼
- 4) MEM key
- 5) REDIAL / PAUSE key
- 6) FLASH key
- 7) Follow-me key (*)
- 8) Conference key (*)
- 9) Operator key
- 10) DIAL / SELECT key
- 11) DEL / EXIT key
- 12) MUTE key
- 13) MENU key
- 14) Mailbox key (*)

- 15) Call Waiting key (*)
- 16) Release Call key (*)
- 17) Numeric keypad
- 18) Input for the external power supply

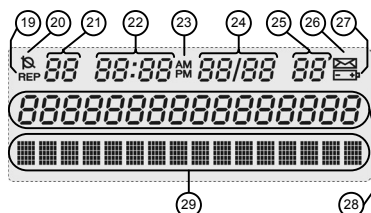

- 19) Repeated calls indicator
- 20) Indicator symbol of MUTE activated
- 21) Received calls counter
- 22) Time
- 23) AM and PM indicator
- 24) Date
- 25) Connection time in minutes
- 26) Indicator symbol of Mailbox messages (*)
- 27) Low battery indicator symbol
- 28) Field for numeric digits
- 29) Field for alpha-numeric characters

(*) depends on the availability of the service by your local operator

Installation

Battery / Power supply installation

This telephone requires 4 AA type batteries - small size (not included) or a power supply of 9 Vdc - 200 mA with positive in the central pin of the connector (not included).


Do not use the two possibilities at the same time, because there is risk of damage for the batteries. Only use the batteries or the power supply to supply the telephone. If you are using the power supply and a

power fault occurs, the telephone will not be supplied by the power supply.
To install or replace the batteries, follow the steps below:

- disconnect the equipment from the telephone line.
- open the battery compartment (position 30).
- install four new batteries, taking care to observe the correct position (polarity indicated by the drawing inside the compartment).

When the batteries are low, needing to be changed, the display will show the low battery indicator symbol (position 27 on page 3).


To install the power supply, just connect it to the telephone (position 18 on page 3) and to the electric energy network plug.

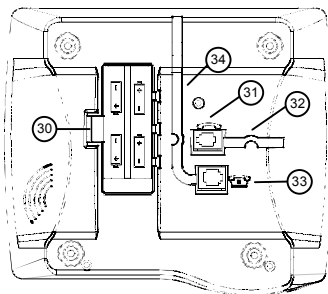


Note:

- The telephone operates without batteries or without a power supply to carry out calls, but the call identification will not work and the display can switch off.
- When a power supply is used with the telephone, it is recommended to use the **C39280-Z4-C508** Siemens power supply.

Handset cord

Connect the long end of the handset cord in the socket marked with the symbol  (position 31). Insert the cord in the cable line (position 32) and attach the short end to the handset.

Line cord

Connect the line cord in the socket marked with the symbol  (position 33). Insert the cord in the cable line (position 34). Attach the other end to the telephone line (RJ11 modular Jack connector).


Recommendation for Installation

Please, observe the following guidelines:

- For your own safety and protection, do not use the telephone in places with overheat or extreme humidity. The telephone operates at temperatures between +5°C and +55°C and it is not water-proof.
- Varnished or lacquered furniture may be marked by some parts of the telephone such as the rubber feet.
- Place the telephone at least one meter away from devices such as cordless telephones or TV sets. These devices may cause interference in the telephone.
- To clean the telephone, just use a damp or antistatic cloth. Never use a dry cloth (danger of electrostatic discharge) or any abrasive cleaning products.
- When the telephone reaches its end of service life, dispose of it in a way that does not cause any harm to the environment, in accordance with the local legal requirements.
- Please, dispose of used batteries in accordance with requirements of environment protection.

Configuration

Once connected to the line, the telephone will be ready to make and receive calls. In this initial situation, the display will show information shown in the figure below, where **NEW 00** is the number of non answered calls:

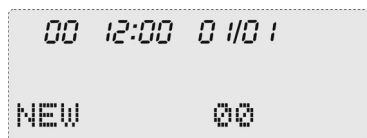

In the next items, it will be shown the description of the possible configurations made by the telephone menu. To make the adjustments, the handset must be on hook.

Display bright

To adjust the display bright, proceed in the following way:

- ③ Press the MENU key
- ⏪ Select the CONFIGURATION option by using the DIAL/SELECT key
- ⏴ Select the Y option by using the ARROW key
- ⏩ Select the BRIGHT option by using the DIAL/SELECT key
- ⏴ Select the desired option (1, 2 or 3) by using the ARROW key
- ③ Press the MENU key

Backlight

To activate or deactivate the backlight of the display, proceed in the following way:

 
- ③ Press the MENU key
- ⏪ Select the CONFIGURATION option by using the DIAL/SELECT key
- ⏴ Select the Y option by using the ARROW key
- ⏩ Select the BACKLIGHT option by using the DIAL/SELECT key
- ⏴ Select the desired option (Y or N) by using the ARROW key, to activate or deactivate the backlight
- ③ Press the MENU key











Setting the time

To adjust the time of the telephone it is necessary to access two options of the CONFIGURATION menu: time adjustment and visualization format (24h or AM/PM). If any of these items are already correct, you can go to the next step by pressing the DIAL/SELECT key ⏪. See the following adjustment procedure:

- ③ Press the MENU key
- ⏪ Select the CONFIGURATION option by using the DIAL/SELECT key
- ⏴ Select the Y option by using the ARROW key
- ⏩ Select the ENTER TIME option by using the DIAL/SELECT key
- ⓪ Enter the time with four digits in the : 24h format (example: 13:57h - enter 1357 digits)
- ⏪ Press the DIAL/SELECT key, until appears the FORMAT option
- ⏴ Select the desired option (24 HS or AM PM) by using the ARROW key
- ③ Press the MENU key




Setting the date




To adjust the date of the telephone it is necessary to access more than one option of the CONFIGURATION menu, to enter day, month and year. If any of these items are already correct, you can go to the next step, without enter anything, by pressing the DIAL/SELECT key . See the following date adjustment procedure:

-  Press the MENU key
-  Select the CONFIGURATION option by using the DIAL/SELECT key
-  Select the Y option by using the ARROW key
-  Select the ENTER MONTH option by using the DIAL/SELECT key
-  Enter the number of the month with two digits (example: 06 for June)
-  Press the DIAL/SELECT key, passing to the option ENTER DAY
-  Enter the number of the day with two digits (example: 08)
-  Press the DIAL/SELECT key, passing to the option ENTER YEAR
-  Enter the number of the year with two digits (example: 03 for 2003)
-  Press the MENU key

Setting the ringer volume







This telephone offers three different ringer volumes. To adjust, proceed in the following way:

-  Press the MENU key
-  Select the CONFIGURATION option by using the DIAL/SELECT key
-  Select the Y option by using the ARROW key

-  Select the RINGER VOLUME option by using the DIAL/SELECT key
-  Select the desired option (1-low, 2-medium, 3-high) by using the ARROW key
-  Press the MENU key

Setting the melody

This telephone offers three different melodies. To adjust, proceed in the following way:

-  Press the MENU key
-  Select the CONFIGURATION option by using the DIAL/SELECT key
-  Select the Y option by using the ARROW key
-  Select the MELODY option by using the DIAL/SELECT key
-  Select the desired option (1, 2 or 3) by using the ARROW key
-  Press the MENU key

Setting the dialing mode (tone/pulse)

Your telephone must be programmed for **TONE** dialing or **PULSE** dialing, according to the telephone line it is connected to. The default factory setting is the **TONE** dialing mode with the **flash time** of **250 ms** (DTMF).

Checking the dialing mode:

Press any numeric key. If you can still hear a dialing tone, change to the other dialing mode.

Changing the dialing mode:

To adjust the dialing mode to **PULSE** or **TONE**, proceed in the following way:

- ⑤ Press the MENU key
- ↔ Select the CONFIGURATION option by using the DIAL/SELECT key
- ▼▲ Select the Y option by using the ARROW key
- ↔ Select the MODE option by using the DIAL/SELECT key
- ▼▲ Select the desired option (TONE or PULSE) by using the ARROW key
- ⑤ Press the MENU key

Temporary changeover of dialing mode:

While the telephone is set to PULSE dialing it may be necessary to temporarily change the dialing mode to TONE dialing.

- Example: You wish to check your banking balance using the telebank service. Make the call as you usually would and, as soon as the call is completed, press ; at this moment your telephone dialing mode will change to **TONE** dialing. When you finished the call, just hang up and the dialing mode will automatically turn back to **PULSE** dialing.

Setting the reception volume

This telephone allows adjustment of the reception volume, which its default is programmed at **normal** volume. To select the desired volume, proceed in the following way:

- ⑤ Press the MENU key
- ↔ Select the CONFIGURATION option by using the DIAL/SELECT key
- ▼▲ Select the Y option by using the ARROW key
- ↔ Select the VOLUME RX option by using the DIAL/SELECT key

- ▼▲ Select the desired option (NORM-normal volume, HIGH-high volume) by using the ARROW key
- ⑤ Press the MENU key

Area code for long distance call

If necessary, this telephone is able to be programmed with the area code of your city. It will allow your telephone to dial correctly the stored RECEIVED CALLS (in case of having contracted the Identification Call Service of your operator - see the item **Call Identification** on page 11). To program the area code, proceed in the following way:

- ⑤ Press the MENU key
- ↔ Select the CONFIGURATION option by using the DIAL/SELECT key
- ▼▲ Select the Y option by using the ARROW key
- ↔ Select the AREA CODE option by using the DIAL/SELECT key
- 0
- :
- Enter the area code (1 to 4 digits)
- ⑤ Press the MENU key

Operator code

If necessary, this telephone is able to be programmed with the operator code of your preference. To program the operator code, proceed in the following way:

- ⑤ Press the MENU key
- ↔ Select the CONFIGURATION option by using the DIAL/SELECT key
- ▼▲ Select the Y option by using the ARROW key
- ↔ Select the OP_CODE option by using the DIAL/SELECT key

- 0 : Enter the operator code (1 to 6 digits)
- 9
- Press the MENU key

Note:

The operator code is valid just for the countries where this service is available.

Mailbox

To program the number of your mailbox by using the MAILBOX ^(*) key (position 14 on page 3), proceed in the following way:

- Press the MENU key
- Select the CONFIGURATION option by using the DIAL/SELECT key
- ▼▲ Select the Y option by using the ARROW key
- Select the MAILBOX option by using the DIAL/SELECT key
- 0 : Enter access number of your mailbox (max of 16 digits)
- 9
- Press the MENU key

(*) in case of having contracted the Mailbox service of your local operator

Other configurations

There are other configurations that can be accessed by using the PREFERENCES option, as is shown by the following:

- Press the MENU key
- Select the CONFIGURATION option by using the DIAL/SELECT key
- ▼▲ Select the Y option by using the ARROW key
- Select the PREFERENCES option by using the DIAL/SELECT key

Enter one of the codes below, in according with the desired option:

- 11 flash time 250 ms
 - 12 flash time 375 ms
 - 13 flash time 600 ms
 - 14 flash time 100 ms
 - 21 pause time 2 s
 - 22 pause time 3 s
 - 23 pause time 3,6 s
 - 24 pause time 1 s
 - 31 enables checking repeated calls
 - 32 disables checking repeated calls
 - 51 erase the list of outgoing calls
 - 52 erase the list of received calls
 - 99 returns to default configuration
- Press the MENU key

Receiving calls


When receiving a call, the telephone will give a resonant warning in accordance with the melody and the volume selected. To answer the call, lift the handset. In case of having contracted the Service of Call Identification of your local operator, the display will show information about the number that originated the call (see the item about **Call Identification** on page 11).

Note:

To receive call identification information, do not answer the telephone before the second ring.

Dialing call numbers



 




Using the numeric keypad to make a call

Lift the handset, wait for the dial tone and dial the desired telephone number through the numeric keypad. During the dialing, the digits of the number will be shown on the display (position 28 on page 3) and the call will be carried out. To dial with the handset on hook, dial the desired number, lift the handset and press the DIAL/SELECT key .






 

As well as the dialed number, the display will show the current time, date and the duration of the call in minutes, from the moment that the handset is lifted (positions 22, 24 e 25, respectively, on page 3).

Using the memories to make a call

With the handset on hook:


-  Press the MEM key
-  Press the desired memory number
-  : (0 to , * and )
-  Lift the handset
-  Press the DIAL/SELECT key

With the handset off hook:


-  With the handset off hook
-  Press the MEM key
-  Press the desired memory number
-  : (0 to , * and )
- 

Using the List of Received Calls to make a call




With the handset on hook:

-  Select the desired telephone number by using the ARROW keys








-  Lift the handset

-  Press the DIAL/SELECT or the OPERATOR key to make a call

With the handset off hook:

-  With the handset off hook
-  Select the desired telephone number by using the ARROW keys
-  Press the DIAL/SELECT key or the OPERATOR key to make a call


Using the List of Outgoing Calls to make a call

-  Press the MENU key
-  Select the OUTGOING CALLS option by using the DIAL/SELECT key
-  Select the Y option by using the ARROW keys
-  Press the DIAL/SELECT key
-  Select the desired telephone number by using the ARROW keys
-  Lift the handset
-  Press the DIAL/SELECT or the OPERATOR key to make a call


 

Note:

It is not possible to make a call from the **List of Originated Calls** with the handset off hook.






Using the REDIAL key to make a call

In order to redial the last dialed number, press the REDIAL key . If the last dialed number contained more than 32 digits, the REDIAL function will not work.

 
 
MUTE key

During a call, when you press the MUTE key , the microphone is switched off and the other party cannot listen to you. The icon  will appear on the display while MUTE is activated. To reactivate the conversation, press the MUTE key  again. While the MUTE is activated, the person you are speaking to will hear music on hold. Music generation can be deactivated through programming. If the music is deactivated, you will be able hear the person you are speaking to, although he will not be able to hear you.

Activating/deactivating the MUTE music


-  Press the MENU key
-  Select the CONFIGURATION option by using the DIAL/SELECT key
-  Select the Y option by using the ARROW keys
-  Select the MUSIC ON MUTE option by using the DIAL/SELECT key
- Select the desired option (Y-activated music, N-deactivated music) by using the ARROW keys
-  Press the MENU key

PAUSE key

 
 

 
 
This key may be used when the telephone is connected on a PBX system, to insert a pause between the digits (the default pause is 2 s – to program another pause time see the item **Other configurations** on page 8). It works after pressing or entering the first digit, when pressing the PAUSE key . These pauses, that are essential for some systems with extension lines, can be stored in the memories, in the Originated Calls and in the REDIAL key . The display

shows the character P on the dialed number to indicate the pause

FLASH Key (special services)

 

The FLASH key  allows you to access specific special services (follow-me, call waiting, conference, etc.), as long as your telephone is connected on a digital central office or on a PBX system. The default flash is 250 ms. It may be necessary to program a different flash time (see the item **Other configurations** on page 8). If you are not sure about the correct flash time, refer to the documentation of your PBX to check what the recommended time is.

Memories

The telephone has 12 memories. Numbers can be stored on the following keys:  to ,  and . All the memories can contain a maximum of 16 digits each. With the handset on hook, the stored numbers can be visualized by pressing the MEM key , followed by the memory key. The display will show the number of the respective register, in accordance with the figure below:



Storing phone number in the memories

-  : Enter the phone number to be stored
-  Press the MEM key

- Press the desired memory number
 (0 to 9, *, and #)

The message "STORED" will appear on the display

Note:

- The number must be stored with the handset on hook.
- A phone number won't be stored in the memories if it is longer than 16 digits.
- You can erase a stored phone number in a specific memory by restoring another phone number in it.
- The keys * and # are stored in the memories (0 to 9, *, and #), independently of the used dialing mode, but they only have effect on the TONE mode.
- It is possible to store an external telephone number in one of the memories, when the telephone is connected on a PBX system. Just insert, before the number that will be stored, the access code for external line followed by a pause (press the PAUSE key ☞).

Call Identification

If the call identification service has been contracted together with your local operator, the telephone number and the name of the call originator can be seen on the display, before taking the handset off hook. The information will be shown on the display after the second telephone ring. **If the telephone is answered before this, the identification information will not be shown on the display.**

Receiving a call

On receiving a call, the display will show the number and the name of the caller. In the case of Long Distance Calls the received number will be showed with the

area code. Now for calls with the same area code that are programmed in the telephone, the caller's number will be shown on the display without the area code.

If the caller number is not sent, it will not be shown on the display and will not be stored in the list of received calls.

On answering the call, the number, the name and current time/date will be shown. The time and the date will be stored for future consultation.


The information received will be shown during the conversation, disappearing when the handset is replaced on hook.

Indication of received calls

With the handset on hook, the display will show the following information: number of received calls, number of new calls, current time and date.

Consultation of received calls

To consult the received calls, press one of the ARROW keys (▼ or ▲), with the handset on or off hook. During the consultation, the display will show the information described below, in accordance with the figure of the display:

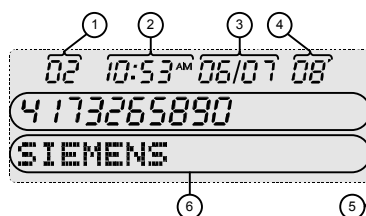

- Order number of call on the list, where 1 is the most recent call
- Time of the call beginning
- Date of the call beginning

- 4) Duration of call in minutes (00' if it was not answered and 99' if it exceeds the two digit counter)
- 5) Caller number
- 6) Caller name

If the list of received calls is empty, on making the consultation the display will show the message "NO CALL".

In the list of new calls (unanswered calls still not reviewed), you can enable or disable the telephone to check repeated calls (see the item **Other configurations** on page 8). When the repeated call indicator **REP** is enabled and there are repeated calls without verification (they are listed as **NEW**), the telephone will store only the last call of each repeated number. When the check of repeated calls is disabled, all the calls will be stored in the list of received calls, even if it is repeated.

Erasing the received calls

To erase a call from the list of received calls, proceed in the following way:

- ▼▲ Select the register that will be erased by using the ARROW key
- ⊗ Press the DEL/EXIT key
- Ⓜ Press the key Ⓜ to confirm

To erase all the list of received calls, proceed in accordance with the item **Other configurations** on page 8, code number 52 in the PREFERENCE option.

Consultation of outgoing calls

To consult the list of outgoing calls, proceed in the following way:

- Ⓜ Press the MENU key
- ➡ Select the OUTGOING CALLS option by using the DIAL/SELECT key

- ▼▲ Select the Y option by using the ARROW key
- ➡ Press the DIAL/SELECT key
- ▼▲ Scroll the list by using the ARROW key

Erasing the outgoing calls

To erase a call from the list of outgoing calls, proceed in the following way:

- Ⓜ Press the MENU key
- ➡ Select the OUTGOING CALLS option by using the DIAL/SELECT key
- ▼▲ Select the Y option by using the ARROW key
- ➡ Press the DIAL/SELECT key
- ▼▲ Select the register that will be erased by using the ARROW key
- ⊗ Press the DEL/EXIT key
- Ⓜ Press the key Ⓜ to confirm

To erase all the list of outgoing calls, proceed in accordance with the item **Other configurations** on page 8, code number 51 in the PREFERENCE option.

Password

The key lock function is protected by a 4 digit password. The default password is 1234, and it can be modified. When the password is entered, the characters " - " (hyphens) replace the password digits as they are keyed in. The ARROW ▼ or ▲ erases the last digit.

Changing the password

- ③ Press the MENU key
- ↔ Select the LOCK OPTIONS option by using the DIAL/SELECT key
- ▼▲ Select the Y option by using the ARROW key
- ↔ Press the DIAL/SELECT key
- 0
: Enter the password (4 digits)
- ③ Select the CHANGE PASSWORD option by using the DIAL/SELECT key
- ▼▲ Select the Y option by using the ARROW key
- ↔ Press the DIAL/SELECT key
- 0
: Enter the new password (4 digits)
- ③ Press the DIAL/SELECT key
- 0
: Repeat the new password (4 digits)
- ③ Press the DIAL/SELECT key

If the entered password does not match with the programmed password in the equipment, the telephone will show a message "PASSWORD ERROR". If there is an error in the repetition of the password, the telephone will ask the new password again.

Key Lock

This telephone allows the lock of calls for mobile phones (LOCK CELL), long distance calls (LOCK LD) and international calls (LOCK INTER). When the telephone is programmed to lock long distance calls, it is not possible to make calls for numbers beginning with 0. When it is programmed to

lock international calls, it is not possible to make calls for numbers beginning with 00. When it is programmed for locking mobile phone numbers, it is not possible to make calls for numbers beginning with 8 or 9.

Note:

The lock option for mobile phones may not work properly in some countries due to the numbering plan of mobile phones.

Locking or unlocking the telephone

- ③ Press the MENU key
- ↔ Select the LOCK OPTIONS option by using the DIAL/SELECT key
- ▼▲ Select the Y option by using the ARROW key
- ↔ Press the DIAL/SELECT key
- 0
: Enter the password (4 digits)
- ③ Select the desired option by using the DIAL/SELECT key
 - TOTAL LOCK
 - LOCK LD
 - LOCK INTER
 - LOCK CELL
- Select the Y or N option by using the ▼▲ ARROW key for the desired lock options
- ③ Press the MENU key to exit or the or DIAL/SELECT key to select another lock option

Note:

If the TOTAL LOCK is enabled, the other locking levels will not appear in the Menu. If the Long Distance Call Lock (LOCK LD) is enabled, the telephone will also be locked for international calls (LOCK INTER).

Temporary unlocking the telephone

With knowledge of the password, it is possible to unblock the telephone in order to make a call. After the call, the equipment will return to the previous state of programmed lock. For temporary unlocking, proceed in the following way:

- ③ Press the MENU key
- 0
: Enter the password (4 digits)
- ③ Press the MENU key
- 0
: Dial the desired telephone number normally

Baby Call

This telephone allows the programming of a number to be called automatically on pressing any numeric key (0 to 9, * and #). This function is useful, for example, to program an emergency number for children in case the parents are absent. This function requires the password for activation and deactivation.

Activating the Baby Call function

- ③ Press the MENU key
- ➡ Select the LOCK OPTIONS option by using the DIAL/SELECT key
- ▼▲ Select the Y option by using the ARROW key
- ➡ Press the DIAL/SELECT key
- 0
: Enter the password (4 digits)
- ➡ Select the BABY CALL option by using the DIAL/SELECT key

- ▼▲ Select the Y option by using the ARROW key
- 0
: Dial the emergency telephone number that you wish to program
- ➡ Press the DIAL/SELECT key

Deactivating the Baby Call function

- ③ Press the MENU key
- ➡ Select the LOCK OPTIONS option by using the DIAL/SELECT key
- ▼▲ Select the Y option by using the ARROW key
- ➡ Press the DIAL/SELECT key
- 0
: Enter the password (4 digits)
- ➡ Select the BABY CALL option by using the DIAL/SELECT key
- ▼▲ Select the N option by using the ARROW key
- ③ Press the MENU key

Note:

The Baby Call function will not work when the telephone was programmed with the TOTAL LOCK option.

Function keys for special services





This telephone incorporates facilities to access some special services on your telephone line. The dedicated keys to the special services allow the direct operation of:

- Follow-me
- Call Waiting
- Conference
- Mailbox

Note:
These services must be contracted together with your local operator.


Follow-me


 
The Follow-me service allows automatic transference of received calls to another telephone number. To activate follow-me, proceed in the following way:

-  Lift the handset
-  Press the FOLLOW-ME key (position 7 on page 3)
-  Dial the telephone number to where you want to make the call transference
-  Press the FOLLOW-ME key (position 7 on page 3)


To deactivate the follow-me service, press the **Follow me** key  twice.


 
Call Waiting

If during a conversation you hear the warning tone of a waiting call, you can answer it by pressing the **Call Waiting** key.  The first call will be retained.


When you wish to pass from one call to another, press the **Call Waiting** key  again. The procedure can be repeated as many times as you wish. To finish the communication in progress and continue with the other, press the **Release Call** key . To finish the last communication, just hung up.

Consultation

When, during a conversation, you wish to make a consultation, press the **FLASH** key  to get the dial tone again. Dial the desired number to set up the consultation communication.

Once the consultation is made, press the **Call Waiting** key  to change between the calls or the **Release Call** key  to finish the communication in progress and continue with the other one.

Conference

The conference service allows the setting up of communication among three people. Firstly set up two communications by using the procedures of Call Waiting or Consultation described earlier. Then press the **Conference** key  to establish simultaneous communication among the three people.

Mailbox

The Mailbox service allows messages to be stored so that the user can hear them later. This service has an access code that can be programmed in the **Mailbox** key (see the item Mailbox on page 8).

Alarm

The alarm sounds daily at the programmed time and shows on the display, when alarming, the message "ALARM", the time and the date. The alarm stops ringing after 40 seconds or after lifting the handset.

If the telephone is off hook at the programmed time, there will be no audio signaling, only the message on the display. The alarm rings at a single volume, independent of the ring volume programming.

The melody of the ring is the same programmed for the call signaling and the ring rhythm of the alarm (1 second followed by a 3 second pause) is distinct from the normal rhythm generated by central office exchange.

In case of collision between the entering call and the alarm, the entering call has priority, it means:

- The ring will be in the rhythm of the call;
- If there is call identification, the alarm clock message on the display will not be shown.


Programming the alarm

- ⑤ Press the MENU key
- ⬅ Select the ALARM option by using the DIAL/SELECT key
- ⬇▲ Select the Y option by using the ARROW key
- ⬅ Press the DIAL/SELECT key
- ⬇▲ Select the ENABLED option by using the ARROW key
- ⬅ Press the DIAL/SELECT key
- 0 Enter the desired time for the alarm
: with four digits in 24h format
- Ⓜ (example: 13:57h - enter 1357)
- ⑤ Press the MENU key

 





 

 


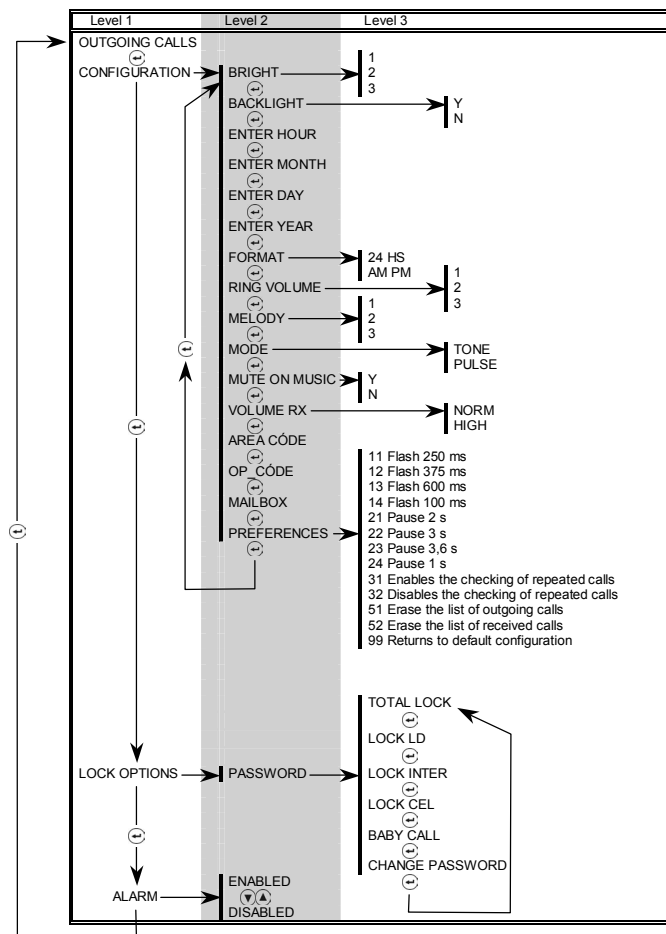





Deactivating the alarm

- ⑤ Press the MENU key
- ⬅ Select the ALARM option by using the DIAL/SELECT key
- ⬇▲ Select the Y option by using the ARROW key
- ⬅ Press the DIAL/SELECT key
- ⬇▲ Select the DISABLED option by using the ARROW key
- ⑤ Press the MENU key

Menu Scheme



Quick Reference Guide

FUNCTION	PROCEDURE
CONFIGURING THE TELEPHONE: <ul style="list-style-type: none"> • BRIGHT • LIGHTING (BACKLIGHT) • ENTER HOUR • ENTER MONTH • ENTER DAY • ENTER YEAR • FORMAT AM PM / 24 HS • RING VOLUME • MELODY • MODE • MUTE ON MUSIC • VOLUME RX • AREA CODE • OP_CODE • MAILBOX • PREFERENCES 	<p>  +  Press the MENU key and select the CONFIGURATION option by using the DIAL/SELECT key </p> <p>  Select the Y option by using the ARROW key </p> <p>  Select the desired configuration option by using the DIAL/SELECT key </p> <p>The following options are configurable by using the ARROW keys:</p> <ul style="list-style-type: none"> • BRIGHT (1, 2 or 3) • BACKLIGHT (Y / N) • FORMAT (AM PM / 24 HS) • RING VOLUME (1, 2 or 3) • MELODY (1, 2 or 3) • MODE (TONE / PULSE) • MUTE ON MUSIC (Y / N) • VOLUME RX (NORM / HIGH) <p>The following options are configurable by using the numeric keypad:</p> <ul style="list-style-type: none"> • ENTER HOUR • ENTER MONTH • ENTER DAY • ENTER YEAR • AREA CODE • OP_CODE • MAILBOX • PREFERENCES
DIALING CALLS WITH THE HANDSET OFF HOOK	Using the numeric keypad
	 Lift the handset and wait for the dial tone
	 Dial the desired telephone number
	Using the memories
	 +  Lift the handset and press the MEM key
	 Press the desired memory number (0 to 9, *, and #)
TEMPORARY CHANGEOVER OF DIALING MODE (TONE / PULSE)	Using the list of received calls
	 Lift the handset
REDIAL 	 Select the desired telephone number by using the ARROW key
	 or  Press the DIAL/SELECT key or the OPERATOR key
TEMPORARY CHANGEOVER OF DIALING MODE (TONE / PULSE)	 After establishing a call, change to TONE by pressing the key * (i.e. to use telebank services)
REDIAL 	 To redial the last dialed number, press the REDIAL key

Quick Reference Guide

FUNCTION	PROCEDURE
DIALING CALLS WITH THE HANDSET ON HOOK	Using the numeric keypad
	Dial the desired telephone number Lift the handset and wait for the dial tone or Press the DIAL/SELECT key or the OPERATOR key
	Using the memories
	Press the MEM key Press the desired memory number (to , and) + Lift the handset and press the DIAL/SELECT key
	Using the list of received calls
	Select the desired telephone number by using the ARROW key + Lift the handset and press the DIAL/SELECT key or the OPERATOR key or
STORING PHONE NUMBER IN THE MEMORIES	Using the list of outgoing calls
	+ Press the MENU key and e select the OUTGOING CALLS option by using the DIAL/SELECT key Select the Y option by using the ARROW key + Press the DIAL/SELECT key and select the desired telephone number by using the ARROW key + Lift the handset and press the DIAL/SELECT key or the OPERATOR key or
	MUTE
	By pressing the MUTE key during a call, the handset will deactivate the voice transmission. To go back to conversation, press the MUTE key again.
	Enter the phone number to be stored and press the MEM key + Press the desired memory number (to , and)
	CONSULTATION OF RECEIVED CALLS
CONSULTATION OF OUTGOING CALLS	To consult the received calls, press one of the ARROW keys, with the handset on or off hook
	+ Press the MENU key and e select the OUTGOING CALLS option by using the DIAL/SELECT key Select the Y option by using the ARROW key and press the DIAL/SELECT key + Press one of the ARROW keys

www.my-siemens.com

A30054-X5793-A800-1-6019 (11/03)